

A



All the items A, B, C below are parts of the kit KRBA.

A+B is necessary in case of water inlet coming from the back, to joint the valve (B) with GEBERIT TWAU.

B




B is necessary for any kind of water inlet: (1), (2), (3)

C



B+C is necessary in case of water inlet coming from the bottom (2), (3), to joint the valve (B) with GEBERIT TWAU.

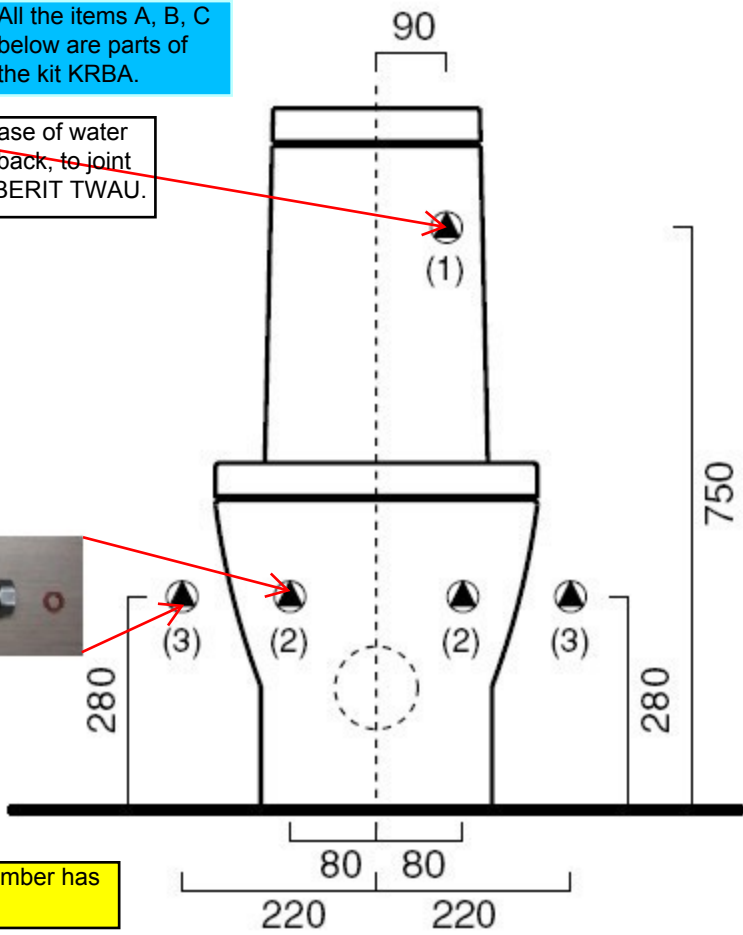

Note: KRBA is not compulsory, as any plumber has a kit like this in his standard suite.